



Leaders in firefighting and medical equipment



(03) 5284 0901

www.firelogistics.com.au



FIRELOGISTICS: EFFECTIVE, RELIABLE & SAFE TO USE

firelogistics is the firefighting and public safety equipment division of RAPP Australia Pty Ltd. The brand was set up to develop, manufacture and supply high performance firefighting equipment and rescue gear, as well as distribute the most effective, reliable and safe to use fire equipment from around the world.

firelogistics products are in service in many firefighting and emergency services agencies around Australia and internationally. RAPP Australia holds ongoing contracts with government departments and private clients for the provision, repair and product development of firefighting equipment products and rescue gear.

firelogistics is committed to the continued support of fire, police, medical and emergency services staff through sourcing, designing, manufacturing and distributing the highest quality firefighting equipment and rescue gear possible.



FIRE EQUIPMENT PRODUCT DEVELOPMENT

firelogistics designs and manufactures a range of firefighting equipment and rescue gear for use in the most dangerous of emergency situations. **firelogistics** despatches representatives to find the most modern, effective and appropriate materials from around the world to construct its fire equipment products. Organisations and government departments also come to **firelogistics** for specific product solutions and assistance in improving the effectiveness of existing firefighting equipment and rescue gear.

Examples of **firelogistics** products presently in service in Australia include:

- Fire Weather Kit
- BackCare BOSS Backpack Spray Unit
- Personal Equipment Harness
- Flexitanks (Buoy Wall, Collar Tanks)
- Compact First Aid Kit (specifically for fire emergencies)

WORKING WITH FIRELOGISTICS

There is always room for improvement, and we encourage any organisation, government department or emergency services body to contact us to work toward better products to support the hard work of emergency service officers. **firelogistics** looks for and develops unique and innovative products that will be effective, reliable and safe to use, not just impressive gadgets.

RAPP Australia Pty Ltd has worked with several government and commercial bodies through the **firelogistics** brand and has enjoyed continued evolution in the functionality and provision of its firefighting equipment and rescue gear.

If your company has a unique product that you would like us to sell, promote or assist in developing further, please contact us on (03) 5284 0901 or sales@rappaustralia.com.au



NEANN Fire Service first aid kit

Using state-of-the-art manufacturing methods, NEANN kits achieve their pre-eminence in the Australian market with meticulous attention to detail and an unrelenting pursuit of continual improvement.



NEANN NSW Rural Fire Service First Aid Kit

NEANN, number one in emergency bag design and manufacturing, offers the NEANN RFS FAK, a small first aid kit designed for the Fire Service of NSW. Most equipment is given its own divider or elastic holder for easy access and extensive use of highly reflective tape for safety. Bonus: an online downloadable layout guide to assist with correct positioning of equipment.

Features:

- Lightweight
- Stores a large range of contents
- Product specific allocation

Options available to purchase:

- NSW RFS FAK – Kit Empty 50-001-0103-0192
- NSW RFS FAK – Contents Only 50-001-0611-0000
- NSW RFS FAK – Stocked (Kit & Contents) 50-001-0102-0192

Contents:

- 15 x Alcohol Swabs
- 1 x Antiseptic Hand Wash
- 4 x Burn Aid Dressing 10.0 x 10.0cm
- 2 x Bandage – Conforming 5.0cm
- 2 x Bandage – Conforming 7.5cm
- 2 x Bandage – Crepe 7.5cm
- 2 x Bandage – Crepe 10.0cm
- 4 x Bandage 110cm Triangle
- 1 x Band Aids (Assorted x 20)
- 1 x Band Aids (Fabric x 20)
- 4 x Dressing Gauze 7.5cm
- 2 x Dressing Non-Adherent 7.5 x 7.5cm
- 2 x Dressing Non-Adherent 10.0 x 10.0cm
- 2 x Dressing Wound No. 14
- 1 x Dressing Wound No. 15
- 4 x Eye Pad
- 1 x First Aid Reference Guide
- 4 x Foil Emergency Blanket
- 2 x Glove Nitrile Powder Free (Medium)
- 2 x Glove Nitrile Powder Free (Large)
- 2 x Instant Ice Pack
- 1 x Pencil (Short) & Notebook
- 1 x Rapid Itch-Relief Spray 25ml
- 4 x Resuscitation Face Shields
- 1 x Scissors (Sharp/Blunt)
- 5 x Splinter Forceps Disposable
- 1 x Safety Pins (Assorted x 12)
- 3 x Bag Reusable Medium
- 8 x Saline 15ml Amp
- 1 x Tape Hypoallergenic, Waterproof
- 1 x Tissues (Pack of 10)



World class emergency products

BackCare BOSS Spray Pack Set



The firelogistics BackCare BOSS (Blacking Out Single Skin) is the world's first ergonomically designed back-carried firefighters' Spray Pack. Created specifically to reduce the fatigue factors indicated in the most modern research as well as to improve operational effectiveness by providing greater capacity and rapid fill and re-fill actions.

Features:

- EZI fill rapid turnaround
- Interference-free pumping
- Kidney chill protection
- Designed especially for firefighter's health, safety and comfort.

Wick-100 and Wick-250 Pumps

Light weight, three stage centrifugal, air-cooled and highly portable, powered by a proven and dependable two-stroke engine. This pump is designed to withstand the rigors of firefighting and is easily integrated into any existing operation.

Performance criteria have been designed to make these two-stroke pumps into a truly outstanding and reliable performers while keeping the weight under 15kgs.

Patented electronic automatic reset, "Loss of Prime" cut-out switch". Optional U.S.D.A approved spark arrestor.



Quick Fill Trailer

Not just a trailer with some gear in it. The **firelogistics** Quick Fill Trailer was designed from the ground up in conjunction with the CFA for the CFA.

The Quick Fill Trailer consists of a custom designed trailer with a GAAM or Regent 13 hp quick fill pump, a **firelogistics** 7500 or a 12000 litre Anti Vortex collar tank, 2 x 3 metre suction hoses and small gear contained in a tool box.



World class emergency products



Flexitanks and Helicones

The Flexitank also known as a Buoy Wall or Collar Tank, is a collapsible open top tank that is quick to ship and easy to fill. These tanks are often used in firefighting efforts & emergency relief areas. Unique helicopter down wash resistant collars available.

Features:

- Different sizes available – 500, 2,000, 5,000, 7,500, 12,000, 22,000 Litres
- Fully welded construction using heavy duty material
- Ground sheet included that acts as a carry / storage bag lid.
- Outlets/Inlets to your specification
- Slope Stability 8-10 degrees
- Internal webbed lug added for hanging or cleaning purposes
- Fully repairable
- Made in Australia

**Available with our
Anti-Vortex
technology**



Fire Weather Kit

This unique purpose built kit conveniently combines instruments for measuring relative humidity, temperature, wind speed and direction with calculation tables with additional room for paperwork and writing materials.

Contents

- Hand held wind meter,
- Bacharach sling psychrometer
- Compass
- Distilled water capsules



World class emergency products

25mm, 38mm and 64mm self-protecting attack hose



Suitable for bush and grass fires with a 300 PSI/2070 KPA service pressure. Mercedes Textiles Firebreak II is a world leading hose that is famous for its quality and durability.

A unique process designed especially for the manufacturing of fire hose was developed exclusively by Mercedes Textiles Limited. This process uses a lining material in a molten state which is then introduced into the fabric jacket as it is being woven at the loom.

No glues are used in this process. Smooth water flow and no delamination.

Resistant to most chemicals, petrol products, ozone and U.V. exposure, hydrolysis, rot and mildew.

Forged Aluminium Quick Connect Couplings

Forged Aluminium Quick Connect or Quarter Turn couplings are the strongest variant of this type of coupling. All of our forged couplings are made from a precast ingot that is stamped and compressed under very high pressure to ensure the aluminium material is extremely dense and strong.

This method of manufacture avoids the problems associated with die cast manufacturing techniques where molten aluminium is poured into a sand cast, the die cast method cannot produce a product anywhere near as consistently dense, strong and durable as the forging production process.



Gated and Non-Gated Wyes for fire line applications

Our range of Gated Wyes permits complete flow control when a hose line needs to be split into two lines, when two lines are combined into one hose line, or when the feed line is shut off.

- Cast alloy,
- 38mm water ways,
- Fitted with external lug couplings, storz or threaded
- Capable of working pressures up to 3500 kPa



World class emergency products

Blackout Bundle

If dragging a 38mm or even a 25mm hose through the bush while doing blacking out is not your idea of fun, consider this concept.

Run 38mm main supply up along the control line/burnt edge. Insert Water Thieves at the hose couplings, then run 19mm lay flat hose laterals back into the burnt ground for blacking out. Not only are they lighter they are just so easy to use.

It also conserve water and reduce the amount of refills/draughting etc.

Reduce the amount of risk from strain and trips and your crews get much less fatigued.

Water Thief



19mm Lay Flat MYTFLO hose

Brass Nozzle

This Brass Nozzle is to be used on the MYTFLO fire hose.

Features:

- Very strong and hard wearing
- Easy adjusted flow rate



The Blackout Bundle can handle small localised flare ups. They can be supplied with Forestry Quick Connect Couplings, Storz or just about any other type of quick connect coupling.

World class emergency products

Heavy duty lifting and carry sheets

This carry sheet is designed to assist lift, move and carry a patient. The device is supplied with multiple webbing handles around the boundary and a central flexible textile platform that can be easily rolled or folded to facilitate easy movement of the patient onto the carry sheet.

Features:

- It can be used in difficult to access spaces,
- The carry sheet comes with the bag,
- Carry sheet dimensions: height 92cm x width 217cm x depth 3cm.



Root Spear Quick Connect



To make gaining access to underground easy fires we have designed a specialised tip that drills and clears material away so fast that it can cut a 1 metre access hole in less than a minute even in the hardest soils. Blacking out is made easier as the shaft enables a fire fighter to place the spear right into cracks in the ground and through holes in fallen or standing trees.

Features:

- Extinguishing underground fires up to 1 metre below the surface,
- Extinguishing hay stack fires, log and tree stump fires and chimney/flue fires,
- Extinguishing smouldering material in ground cracks when blacking out.

Pulaski Axe

This combination axe / mattock tool has been manufactured to the specifications FFES HT-1 as published by the CCFFM / FFEWG 95.

A very popular tool in Canada and the USA which is now being adopted in Australia particularly for work on mineral earth trails.

Include one or two Pulaskies in a rake hoe team and those stubborn roots are a thing of the past.



World class emergency products



NEANN SPO resuscitator with back pack

The NEANN SPO have an ergonomic carrying design, are fully padded and have a moulded back harness system, with removable storage pouches and each item of equipment has its own pocket or elastic loop. All equipment is immediately visible on opening, with clear pockets (no hidden equipment) and it has window labels and layoutguides to ensure equipment is placed where it should be.

Features:

- Replaceable heavy duty wear base
- Ability to mount suction on the outside of the kit to prevent internal soiling
- Rigid design means the kit can operate standing or lying down.



OxyresQ™



The OxyresQ is designed to be flexible and carry the equipment you want, to the level of care you wish to provide. A full range of basic, intensive and therapy right through to advanced airway equipment can be housed in this kit. This stocked kit is under 22kgs and can hold our new disposable variable suction unit NeVAC.

Features:

- Lightweight and ergonomically designed,
- Houses our new disposable venturi suction unit.



DEPLOY FIRE HOSE FASTER!


‘THE CLEEVER’



THE CLEEVER

Made of sturdy stainless steel and heavy-duty webbing, The Cleever is extremely versatile.

Use The Cleever to carry and then deploy a 10m coil of lay flat fire hose right at the entry point to the fire.

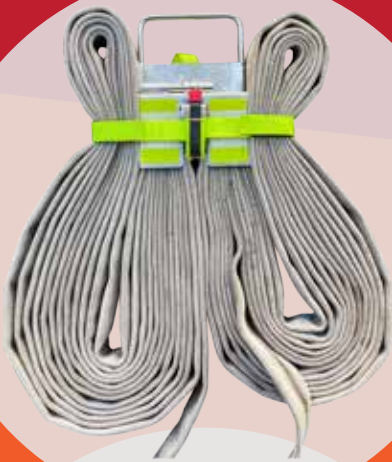

World class emergency products

Service & maintenance



RAPP Australia Pty Ltd provides servicing and repairs for our firelogistics and NEANN brands.

RAPP Australia offers scheduled onsite and off-site servicing and repairs for any products requiring such work.

We have a network of authorised service agents around Australia.

Technicians that can conduct onsite repairs or back-to-base servicing, depending on the product requirements.

Please contact us on (03) 5284 0901 or sales@rappaustralia.com.au before returning any products for service or repair.

RAPP Australia Pty Ltd operates a clean workshop room that is dedicated to the service needs of our customers.

